

USER'S MANUAL

RAPID-3M6



DEL-AIR SYSTEMS
 10-17-01 10:45AM

Model RAPID

Alarm / Warning Indicator

Temp 1	Max/Min 2	Events 3	ESC
Vent 4	Timer 5	Target 6	↑
Test 7	Sensor 8	Alarm 9	↓
🔒	System 0	+/-	OK



120/240 V, 50/60 Hz
 0.2/0.1 A, 24 VA

Made in Canada


Introduction

The RAPID Environment Control System is a complete, fully programmable and networkable two zone agricultural controller. The system uses a revolutionary architecture in agricultural control, and is designed to accommodate any size facility. A typical RAPID system may offer the following:

- RAPID Environmental Control
- RAPID Device Module(s)
- RAPID-PC Monitoring Package
- RAPID Temperature Sensor
- Sensaphone® Auto-dialer Alarm package

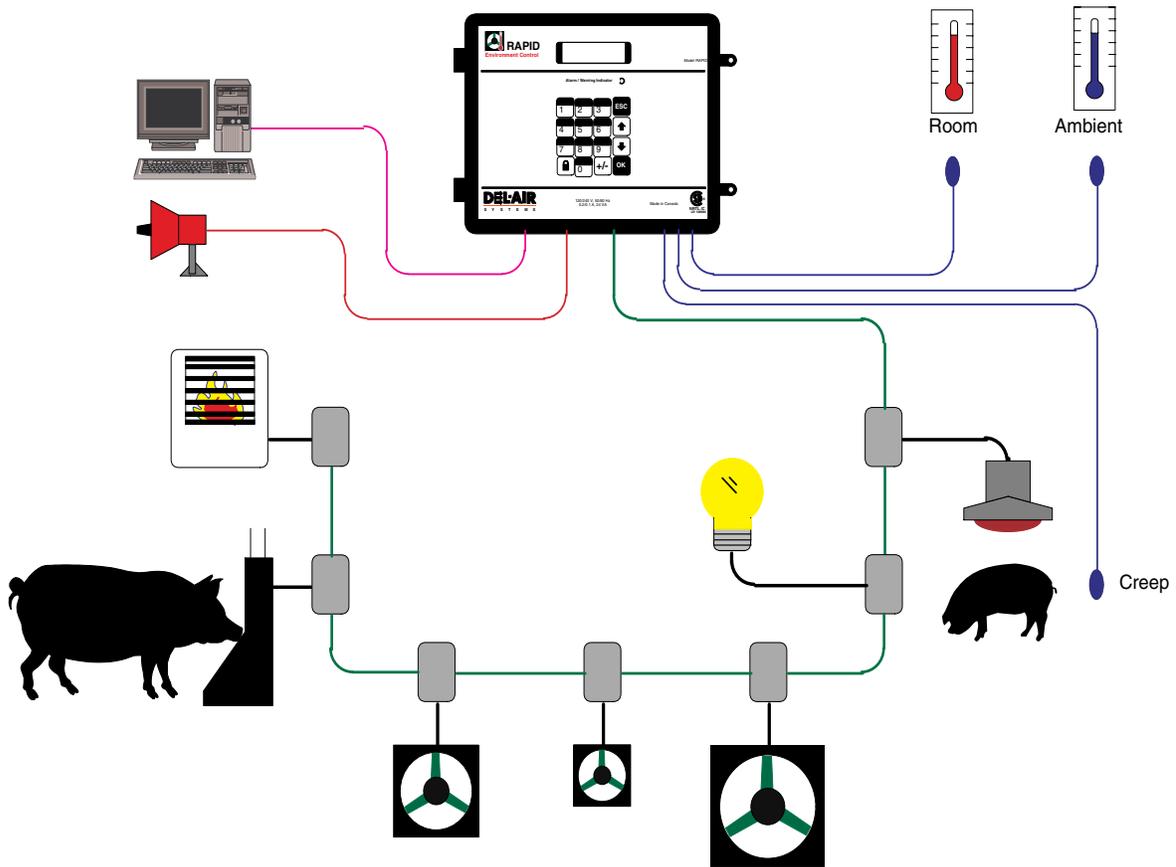


Figure 1 - Typical RAPID Control Setup (1 Zone Only).

RAPID's revolutionary architecture is designed to economically control any size facility, from 2 to 128 zones! The system uses a simple twisted-pair network, which connects the controller to a PC, as well as its "smart" device modules.

Expanding your facility? Simply add another controller(s)† to the PC network.

Need more controller outputs? Simply add another device module(s)† to the device module network.

† See the Installation Guide for expansion limitations.

Introduction 1

First Time Installation Hints 3

1 Panel Features 4

2 Menu Information 4

 2.1 Zone Selection 4

 2.2 Area Selection 4

 2.3 Editing Parameters 4

3 Key Descriptions 5

4 Viewing Temperature and Alarm Data 6

5 Ventilation Programs 6

 5.1 The Ventilation Program 6

 5.2 Empty Room Program 7

 5.3 Monitor Program 7

6 Timed Outputs 7

 6.1 Timed Events 7

 6.2 Cycled Event 8

7 Setting Target Temperatures 8

 7.1 Fixed Target 9

 7.2 Step-Day 9

 7.3 Target Setback 10

8 Testing The Control And Modules 10

 8.1 Mechanical Ventilation 11

 8.2 Heater 11

 8.3 Natural Ventilation 11

 8.4 Timed Outputs 11

 8.5 Alarm Test 12

 8.6 CPU Test 12

9 Configuring the Sensors 12

 9.1 Sensor Descriptions 12

 9.2 Calibrating Sensors 12

 9.3 Factory Calibration 12

 9.4 Auto-Calibrate 12

 9.5 Sensor Failures 13

10 Alarm Functions 13

 10.1 Alarm Acknowledge 13

 10.2 Alarm Level 13

 10.3 Enable and Disable 13

 10.4 Emergency Mode 13

11 System Menu 14

 11.1 Miscellaneous Parameters 14

 11.2 Mechanical Ventilation 15

 11.3 Natural Ventilation 16

 11.4 Control Parameters 17

 11.5 Network Address 18

 11.6 Reboot 19

12 Setting up Security 19

 12.1 Using The RAPID With PIN Enabled 19

 12.2 Setting up PIN 19

 12.3 Changing PINs 20

 12.4 Deleting PINs 20

 12.5 PIN Logs 20

13 Control Strategy 20

 13.1 – PID Explanation 20

 13.2 Typical Control Operation 20

Appendix A – Module Addressing 21

First Time Installation Hints

It is recommended that for a new installation the user first read over the entire manual to become familiar with the features of the RAPID control. Then proceed with the steps listed below to configure it for your site.

1

The first step is to test every device connected to the RAPID to make sure it is able to control each device properly. Section 8 Testing The Control And Modules describes how to test each of the devices.

2

Restore the Factory Settings for the control by pressing the button marked "System" and then press OK when it shows 1) Misc. Now press the up arrow button so that it shows 4) Factory Preset and then use the arrow button to verify that you want to do it and press OK.

3

Configure the control for what ventilation equipment is connected to it and when to use it. This is accomplished by configuring the System Menu parameters. Refer to Section 11.

4

Configure the Temperature Sensors. This is dealt with in Section 9 Configuring the Sensors.

5

After the Temperature Sensors are operating, the Target Temperature needs to be set. Section 7 Setting Target Temperatures deals with setting the Target Temperature.

6

Once the Target Temperature is set you have to tell the RAPID which Ventilation Program to use to get it there. Section 5 Ventilation Programs shows the different programs available to use

7

Enable alarms so that any emergencies can be reported. Section 10 Alarm Functions describes the Alarm Menu. Alarms include high or low temperature, sensor failure and power failure.

8

Set up the Timed and Cycled Events if they are being used. Section 6 Timed Outputs shows how to set up both of these. This could include lights, feed systems in the Timed Events and spray/drip cooling for the Cycled Event.

9

The last setting to check is the PIN Access. The control comes with the security off but the manager may set this up to make sure only responsible personnel are making changes to the settings. Configuring PIN is described in Section 12 Setting up Security.

The Chapters are set up in the order of the buttons so that finding information will be easier. As such, the chapters do not follow the above order.

HINT:

Throughout the manual are flowcharts to help guide you through the menus. To see how to navigate through the menus please read through Section 2 Menu Information.

1 Panel Features

- The RAPID Control’s 2-line LCD display and full 16-button keypad provide a simple and user friendly interface to all programmable features of the system.
- The panel has a visible alarm indicator to alert the user if any alarm conditions exist.
- All function keys double-up as numeric keys for simple changes to target temperatures, fan speeds, etc.

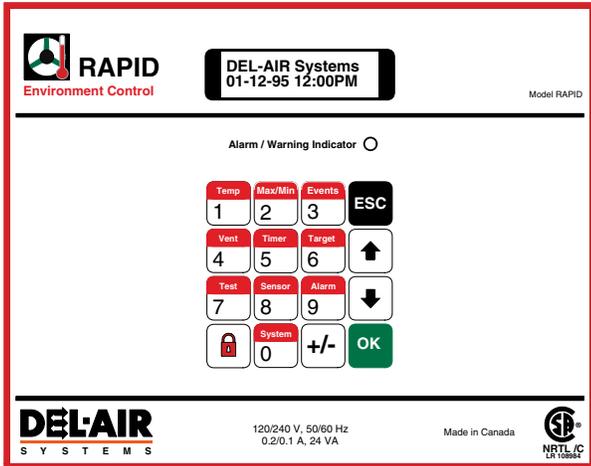


Figure 2 - RAPID Control Panel

2 Menu Information

The RAPID Control has its main menus built in to the function keys on the face of the controller. Each of these menus or “function” keys has sub-menus that are displayed on the display. The function keys are of two different types:

- 1) Display Functions
2. Program Functions

Function keys 1-3 are **display** functions only. There is no programmable data within these functions. Function keys 4 - 0 each contain sub-menus that contain all **programmable** features in the system.

Each of the programmable function keys has an accompanying flowchart in the manual to make it easier to navigate through and set up. To follow the flowchart press **OK** to move to the right and press the **up/down arrows** to move up and down in the flowchart. The flowcharts use the following four symbols. Table 1 shows the symbols and describes what they mean.

Table 1

	This symbol indicates that the arrows can be used to select an item from a list.
	This symbol indicates that a number is to be entered using the number keys.
	This symbol is used when no input is required from the user. Display only.
	This symbol shows sub-menu names. The arrow keys are used to pick the submenu desired.

2.1 Zone Selection

Each control is capable of controlling two separate zones or rooms. Therefore, when a function key is pressed, the system asks for the zone to be displayed or programmed. The zones are defined as Zone 1 and Zone 2. Using the **up/down arrow buttons** toggle between the zones and pressing **OK** selects the zone shown on the display.

2.2 Area Selection

If sensor 2 is enabled as a creep sensor, the control will ask which area (zone or creep) is to be displayed or programmed in the chosen Zone when a function key is pressed. Choosing the area is identical to the Zone Selection, pressing the **up/down arrow buttons** will toggle between Zone and Creep. Pressing **OK** will then select the area shown.

2.3 Editing Parameters

When you have followed a flowchart to the point that you are at one of the parameters to set, this is how you make the changes.

To change a parameter setting, press...

1. **Numeric keys** 0 - 9 to enter desired number (Pressing the +/- key can be used to enter a negative value into a field such as when entering sensor offsets.)

or

press the **up/down arrows** to increase/decrease the numeric field or to toggle between states such as On and Off.

2. **Press OK**, this locks the value into memory or sends the command, pressing **ESC** will disregard the change and keep the original data.

3 Key Descriptions

The table provided below describes the function of each of the keys on the front panel of the control. Keys 0-9 are used as both numeric keys and function keys.

Table 2

Key	Description
	Displays present Target Temperature and Actual Temperature for the Area chosen as well as the Ambient Temperature.
	Displays the minimum and maximum temperatures since midnight for Zone, Creep (when enabled) and Ambient.
	Displays a list of recorded alarms.
	Changes the Ventilation Program that the controller is running. (Ventilation, Empty Room or Monitor)
	Edits and enables different Timer functions such as lighting or feeding as well as the Cycled Event for spray/drip cooling.
	Used to set the Target Temperature for the Zone and Creep areas.
	Allows the user to manually turn on a device or inquire the device's status. This is used to verify that all modules are responding properly to the RAPID's commands.
	Allows the user to enable or disable sensors and fine tune sensor readings.
	Used to acknowledge alarms. Edits and enables the alarm for the Zone and Creep Areas.
	Sets up the RAPID's internal configuration and preferences.
	Escapes to the home menu (See Figure 2 - RAPID Control Panel). Exits fields without saving changes.
	Selects a sub-menu option. Saves all program and numeric field changes.
	Press to enter Personal Identification Number (PIN) to gain access to control. Enable/disable, add/remove PINs etc.
 	Scrolls through sub-menus Increases/decreases numeric values.

4 Viewing Temperature and Alarm Data



4.1 Current Temperature Viewing

After pressing this key and selecting the zone, the screen will display the Zone's current Target and Actual Temperature in the temperature scale selected in the System Menu. Pressing the **up/down arrows** will scroll to the Ambient temperature, Creep temperature if Sensor 2 is enabled as Creep or show each sensor individually if both sensors are enabled as zone.



4.2 Min/Max Temp Viewing

This allows the user to view the maximum and minimum temperatures of the Zone, Creep and Ambient sensors since midnight of the current day. Pressing the **up/down arrows** will display Zone, Creep and Ambient temperatures.



4.3 Recalling Alarm Data


This displays when and which alarms have occurred in the chosen zone. These logs are kept for an indefinite amount of time.

Alarms include the following conditions:

- High Temperature Alarm
- Low Temperature Alarm
- Bad Sensor
- Alarm acknowledgment
- Alarm Off

Logs for each area of the zone are kept in separate logs so each area of each zone can be viewed independently. Using the **up/down arrows** will scroll through the logs.

5 Ventilation Programs

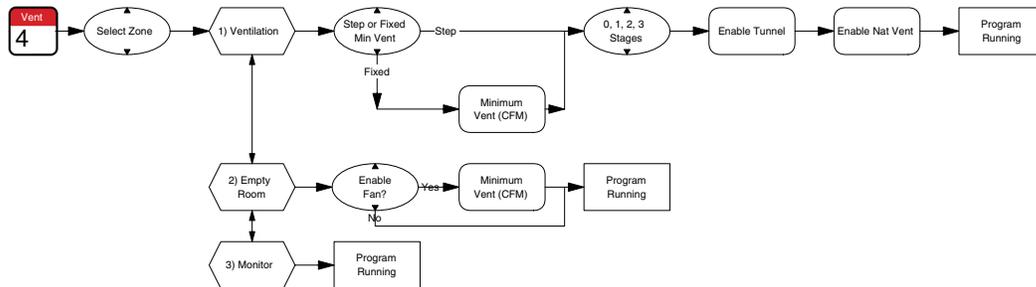

Flowchart 1

There are three different programs that the user can choose from to control the ventilation in each zone. This section describes the programs and how to use each one of them.

Flowchart 1 shows the menu steps for running the ventilation programs

The programs are automatically started when all parameters have been OK'd. A confirmation message will be displayed, for example "**VENTILATION PROGRAM RUNNING**". If the confirmation message has not appeared the control will still be running the previous program. Only one of the three programs can run at one time. Therefore, when a new program is selected, the previous running program is automatically disabled.

5.1 The Ventilation Program

The Ventilation Program should be used whenever there are animals in the room. It is designed to operate all the ventilation equipment that has been installed in the zone to control the room temperature.

The ventilation program uses the following settings:

A) Step or Fixed Min Vent

If the Step Day Program is running you can choose to use the Fixed Min Vent or Step Day Min Vent.

This can be changed at any time during the program. When changed from fixed to step, it automatically sets the min vent to the current day's value as set by the step day program. When changed from Step to Fixed the control next asks for the fixed min vent rate.

B) Fixed Min Vent Rate

This is the least amount of air ever to be moved through the room, even when the room temperature drops below Target. It is entered as a percentage of the Stage 0 and Stage1 fans ventilation combined.

e.g. Stage 0 moves 2000CFM and Stage 1 moves 4000 CFM. If the room requires a minimum ventilation rate of 1500 CFM, the min vent would be $1500/6000=25\%$.

C) Number Of Stages Enabled.

It may be desirable to disable some stages of exhaust fans in different seasons or when small animals are in a room. This setting allows you to choose how many stages of exhaust fans you want enabled.

The **up/down arrows** are used to select 1, 2 or 3 stages enabled. Stage 0 is included if enabled.

- Fans can only be enabled if they are installed in the System menu.

IMPORTANT:
It is very important that a fan stage be disabled in the control if it is not installed or not operational in the ventilation setup.
The RAPID control uses a unique control strategy to maintain the target temperature. All stages of ventilation and heater are combined to control to one target temperature. This has been accomplished using a control technique called "PID". The control uses PID to automatically calculate a ventilation rate for the zone as the temperature deviates from the Target Temperature. If a stage is enabled but not plugged in, the control may still try to run only that stage and shut off the other stages. This could result in temporary moments of minimal ventilation until the temperature rises and other available fans could come on.

C) Enable Tunnel

If Tunnel has been enabled in the System Menu, the option of using it for the current program is available. Use the **up/down arrows** to select ENABLED or DISABLED.

D) Enable Nat Vent

If the Natural Ventilation has been enabled in the System Menu, the option of using it for the current program is available. Use the **up/down arrows** to select ENABLED or DISABLED.

The Empty Room Program is used when a room needs either no ventilation or no more than the first stage fan to ventilate a room. The heater is still enabled to keep the room up to the target temperature. Since the room is empty it also disables natural ventilation, tunnel, stir fan, timed events, the cycled event and creep heat. If the control was in Natural Ventilation or Tunnel mode when the Empty Room Program was started, it immediately returns to Mechanical mode. The Empty Room Program uses the following settings:

A) Enabled Fan?

The stage 1 fan (with stage 0 if enabled) can be either enabled or disabled. The **up/down arrows** toggle between Yes and No. The Heater will always remain active to keep the room at the Target Temperature but the fan can be disabled to keep from exhausting warm air outside.

B) Min Vent Rate

The Step Day Min Vent program is automatically disabled so it will ask the Fixed Min Vent to use. (See description in Section 5.1B - Ventilation Program)

5.3 Monitor Program


This program is used only for testing purposes or in an emergency if all devices in a zone need to be shut off immediately.

NOTE:
Monitor Program disables and stops all devices connected to the RAPID except for the Timed and Cycled Events. This program is used only for testing or for emergency.

5.2 Empty Room Program

This program should be run only when there are no animals in the selected zone.

6 Timed Outputs

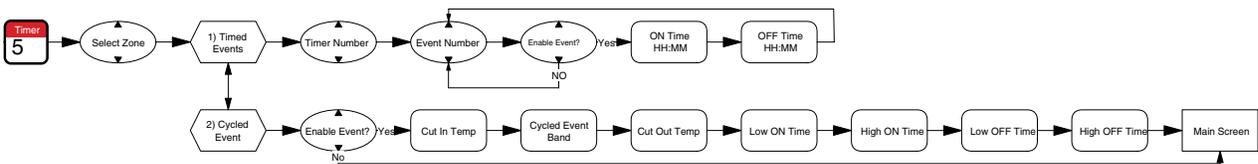

Flowchart 2

The RAPID has two types of timed outputs.

The first type is **TIMED EVENTS**. This turns devices on and off at certain times of the day. The RAPID control contains three timed outputs per zone. Each output can turn on and off eight times per day to accommodate such outputs as feed systems and lights.

The second type is the **CYCLED EVENT**. This cycles a device on and off only when the temperature is above (or below) a configurable temperature. The RAPID has one Cycled Event per zone. This Event is commonly used for spray/drip cooling.

Flowchart 2 shows the menu steps for setting up the timed outputs.

6.1 Timed Events

This section describes each setting to set up the Timed Events.

Timer Number

Use the up/down arrows to select which of the three timers to select.

Event Number

Use the up/down arrows to select which of the eight events of the chosen timer to program.

Enable Event

Not all events need to be used on each timer. This enables or disables the event for the selected timer.

ON Time

This is the time of day the device will turn on.

- Each timer has eight events so there are eight times the device can be turned On each day.

OFF Time

This is the time of day the device will turn off.

NOTE:

When entering Time into the RAPID you type in the hours then "OK", then the minutes and "OK". Time must be entered in the 24 hour format.

6.2 Cycled Event

The cycled event is proportional, meaning that the event will engage and start cycling at the Cut In Temperature and as the temperature rises (or lowers), the on and off times go from the low settings gradually up to the high settings. This allows the cycling to occur more or less often as temperature rises (or lowers).

This section describes how to set up the control to use the Cycled Event.

Enable Event

This is where the control is told to use the event or not. Disabling the event will stop it from activating even if the device is still connected to the RAPID.

Cut In Temperature

The temperature that the cycled event will engage and start cycling.

- This is an actual temperature, not a band set from the target for the room.

Cycled Event Band

This is the number of degrees above the cut in temperature that it takes to reach the "high" settings from the "low" settings.

Cut Out Temperature

The temperature the event will stop cycling and shut off. If you want the Cycled Event to run when the room temperature is above the Cut In Temperature (eg Spray Cool) then make the Cut Out Temperature lower than the Cut In. If you want the Cycled Event to run when the room temperature is below the Cut In Temperature, set the Cut Out Temperature above the Cut In.

- This is an actual temperature, not a band set from the target for the room.

Low Cycle ON Time

This is how long, in minutes and seconds, that the event will stay on for when the room temperature is at the Cut In Temperature.

High Cycle ON Time

This is how long, in minutes and seconds, that the event will stay on for when the temperature has reached the Event Band.

Low Cycle OFF Time

This is how long, in minutes and seconds, the device will stay off for when the room temperature is at the Cut In Temperature.


High Cycle OFF Time

This is how long, in minutes and seconds, the device will stay off for when the room temperature has reached the Event Band

NOTE:

When entering Cycle On/Off times into the RAPID you type in the minutes then "OK", then the seconds and "OK".

7 Setting Target Temperatures

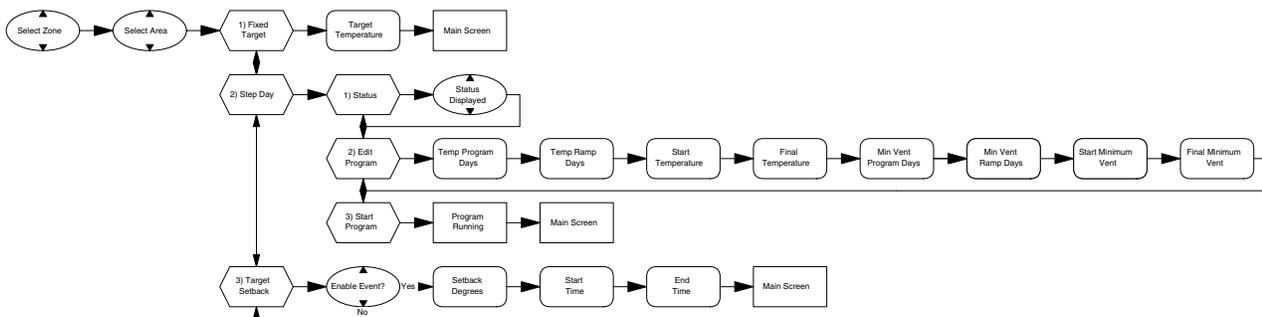

Flowchart 3

The RAPID control is able to monitor and control two areas per zone, the Zone (room) and the Creep Area. The control also has two temperature controlling programs

built into the system; these are Fixed Target and Step Day programs. Each area in each zone can use either program

to set its Target Temperature. These two programs can also be supplemented by the Target Setback program. This section describes and shows how to use each of the programs.

Flowchart 3 shows the menu steps for setting the Target temperature.

NOTE:
If Sensor 2 is not enabled as Creep for the current zone, Creep will not show up in the Target menu.

7.1 Fixed Target

Fixed Target is used when the target temperature for the zone does not need to change over a period of time. The temperature entered stays the same until another temperature is set. Once selected, enter the desired target and press OK to save to memory.

7.2 Step-Day

This program is used to automatically change the target temperature and min vent over a specified growth period. When configuring the step day program for the creep area the parameters for min vent are omitted since min vent applies to the zone only, not the creep.

Once Step Day is selected the first step is to edit the program. After the parameters are set, the program must then be started to enable the program.

If the same parameters are used each time it is not necessary to edit the program each time before starting it when the animals are put into the room the program only needs to be started again. If the step day program is used for the zone and creep areas you must start each step day program individually.

If a step day program is running and you want to view the current day of the program, what the min vent is or the current target, you can select the Status menu item in the Step Day menu. The initial screen displays the min vent program status, pressing the down arrow will display the temperature program status.

Figure 3 shows the temperature parameters that are used to develop the growth curve:

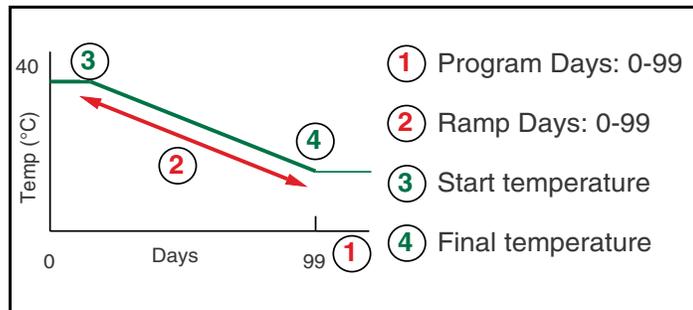


Figure 3

Temp Program Days

The total number of days that the Temp Step Day program runs, including the initial time it keeps the temperature constant as well as the time it will ramp the temperature. After the number of program days have passed the temperature will remain at the final temperature.

Temp Ramp Days

The number of days the control will ramp the room temperature from the start to final. By making the ramp days less than the program days, an initial higher temperature can be maintained in the room during the early periods of the animal's growth. The temperature steps are automatically calculated and updated in the system at midnight.

Start Temp

The Target Temperature desired when the program is first started.

Final Temp

The Target Temperature desired when the program is finished.

Vent Program Days

Is identical to the Temp Program Days but is used for the Ventilation Step Program to ramp the Minimum Ventilation.

Vent Ramp Days

Is identical to the Temp Ramp Days but is used for the Ventilation Step Program.

Start Minimum Vent

The min vent (see page 6) desired when the program is first started.

Final Minimum Vent

The min vent desired when the program is finished.

IMPORTANT:
Changing the date while the step-day program is running will move the program back or ahead and change the Target and Min Vent accordingly.

The following example shows how the growth curve may be setup.

E.g.)	<u>SYSTEM DISPLAY</u>	
	TEMP PROGRAM DAYS	28
	TEMP RAMP DAYS	21
	START TEMP	25.0°C
	FINAL TEMP	20.0°C
	VENT PROGRAM DAYS	40
	VENT RAMP DAYS	33
	START MIN VENT	25%
	FINAL MIN VENT	100%


In this example the growth cycle is 40 days. This program will operate such that the room temperature is maintained at 25.0°C for the first 7 days and then will automatically ramp down to 20.0°C for 21 days. The min

vent will be at 25% of Stage 1 for the first 7 days and will ramp up to 100% of Stage 1 for the remaining 33 days. The target will hold constant at 20.0°C after the 28 days but the ventilation will continue to increase for the entire 40 days.

7.3 Target Setback

This feature is can be used when a reduced target temperature is desired during a portion of the day. This program will reduce the Target Temperature whether it is set by the Fixed Target or the Step Day Program. The Target Temperature will be reduced by the set number of degrees from the Start Time to the End Time. After the End Time it will return the Target to its original temperature.

8 Testing The Control And Modules

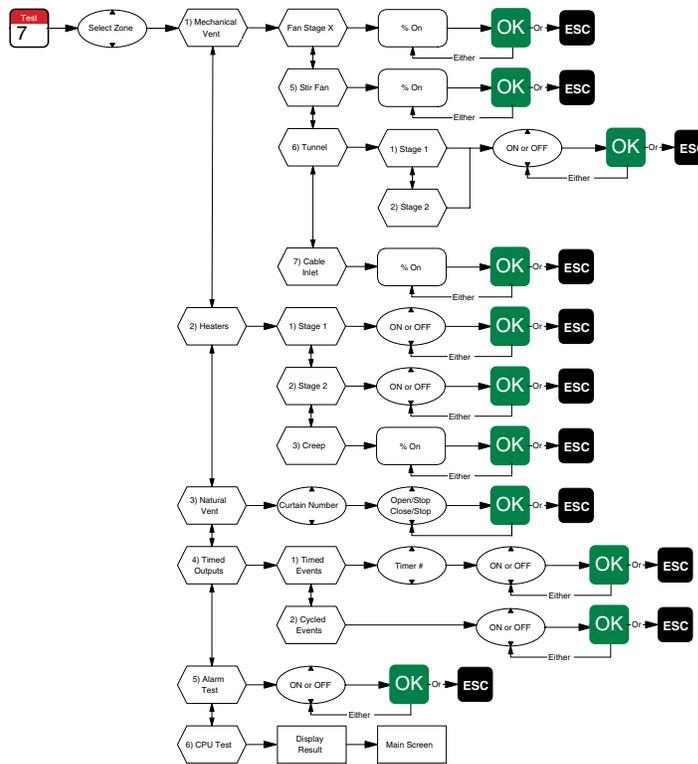

Flowchart 4

The Test feature serves two purposes. First, it is used to manually turn on and off any of the devices connected to the RAPID Control. Second, it allows the user to find out what the RAPID Control is telling each device to do.

To manually test the devices the control must first be put into Monitor Program. Once in Monitor you can use Test to manually control fans, heaters, inlets, curtains, alarm outputs, as well as perform internal controller checks. These tests may be performed to ensure that all devices are functioning properly. Devices turned on or off during testing will remain in that state until either the Ventilation or Empty Room program is again started.

To get the RAPID to display what each device is supposed to be doing, do not put the control in Monitor Program. When you press Test it will warn you that you can not make changes to the devices by showing the message:

ZONE X NOT IN MONITOR PROGRAM

Pressing OK at this point will allow you to enter the Test Menu to view the status of the devices. Now you may choose any of the devices and the RAPID will show you what that device has been told to perform. This is a one-time display. It will not update the screen if the device changes after it has displayed the status. To update the display you must press ESC and test the device again.

Flowchart 4 shows the menu steps for running the tests.

NOTE:

To manually turn devices on and off the control must be in MONITOR program. To do this, select the monitor program as shown in Section 5 Ventilation Programs. If the zone is not put in Monitor Program the control will continue to operate the equipment and will override any changes you try to make.

8.1 Mechanical Ventilation

A) Stages 0 to 3

A variable speed test may be performed on ALL stages of exhaust fans. Manually enter the desired speed of the fan (between 0 and 100%) and press OK. After OK is pressed another value may be entered and OK'd, this can be done repeatedly. When finished testing a fan, press ESC to get back to the main menu.

This test is particularly useful for determining the minimum safe operation of the fan that is to be speed controlled.

NOTE:

The Test menu will allow Stage 3 to be tested as a variable speed fan. If your Stage 3 fan is not able to operate variable speed (e.g. belt drive fan) you should use only 0% and 100% to test the fan.

NOTE:

Any value less than 15% will be assumed to be 0%. The RAPID will never try to run a fan at less than 15% speed as most fans will move very little air at this slow speed.

- When ESC is pressed, the fan will continue to run at the last speed entered in the test. Normal operation will start when either the Ventilation or Empty Room Program is started.

B) Stir Fan

This allows for testing of the Stir Fan.

To test, enter the desired speed and press OK to send the command to the fan. Press ESC to return to the main menu when done.

C) Tunnel

This test manually runs the Tunnel Fans and Tunnel Curtain.

First select stage 1 or stage 2 by using the up/down arrows and press OK. Then use the arrows to select off or on and press OK. Like the previous tests, you can send repeated commands by pressing the arrows and OK again to send the command.

To leave, press the ESC key.

D) Cable Inlet

The inlet will open to the percentage that is entered. A number must be entered and the OK button pressed. To leave the test, press the ESC key.

- Refer to the Installation Guide Section 7 for instructions on setting up the cable inlets

8.2 Heater

The Heater test will test the heaters in both the Zone and Creep areas.

A) Stage 1 Heater

The Stage 1 heater is the primary room heater.

If the heater has been configured in the System Menu as proportional this menu will work similarly to the stage 1 fan. If it is not configured as proportional, the up and down arrows will toggle the state from Off to On and back. After a state has been chosen the OK key must be pressed to send the command to the device.

When done testing, pressing the ESC key will take you back to the main menu.

B) Stage 2 Heater

The Stage 2 heater is either the higher output mode on the primary heater or is physically a second room heater.

The test operates similarly to the Stage 1 Heater described previously.

C) Creep Heater

The Creep heater test works the same as testing a variable speed fan since the RAPID is capable of proportional control of heat lamps, etc.

See page 11.

8.3 Natural Ventilation

This test allows the user to manually tell the curtains to move up, move down, and stop. It also will show the current position of the curtain if the control is not in Monitor Program.

A) Curtain Number

The up/down arrows or the number keys can be used to select the curtain number. When the proper number is on the screen, press OK.

B) Open/Stop/Close

The top line displays the percentage of full open if the control is running either the ventilation or empty room programs. If in monitor program it will show ???% since the control can't know where the curtain is.

The up/down arrows will toggle the display between OPEN, STOP, CLOSE, STOP. After the proper one is on the display press OK to send the commands to the curtain. When done testing press ESC to get back to the main screen.

IMPORTANT!

Always STOP the curtain before changing its direction. Failure to do so may result in damage to the curtain and/or actuator motor.

8.4 Timed Outputs

This tests to see if the Timed Events and Cycled Events respond properly.

A) Timed Events

To test the module, first choose the proper timer (1 to 3). Use the up/down arrows to select the proper timer and press OK. After the timer is chosen use the arrows to select On or Off and press OK to send the command. Pressing ESC takes you back to the main menu.

B) Cycled Events

The test operates identically to the Timed Events in page 11

8.5 Alarm Test


This feature tests the alarm contacts to ensure that they are operational. Use the test to activate either a local siren or central auto-dialer. The Alarm LED on the RAPID panel will light when the alarm condition is ON. When in the "Alarm Test" screen, use the up/down arrows to toggle On or Off and OK to initiate the command.

IMPORTANT
Make sure the Alarm is off before leaving. If left on, the alarm contacts will stay on after the test is over.

8.6 CPU Test

This is an internal test of the controller. When OK is pressed the display should show the software version number if the test has passed. If the display shows an error number the test has failed. Should the test fail, please note the error number and consult your dealer.

9 Configuring the Sensors

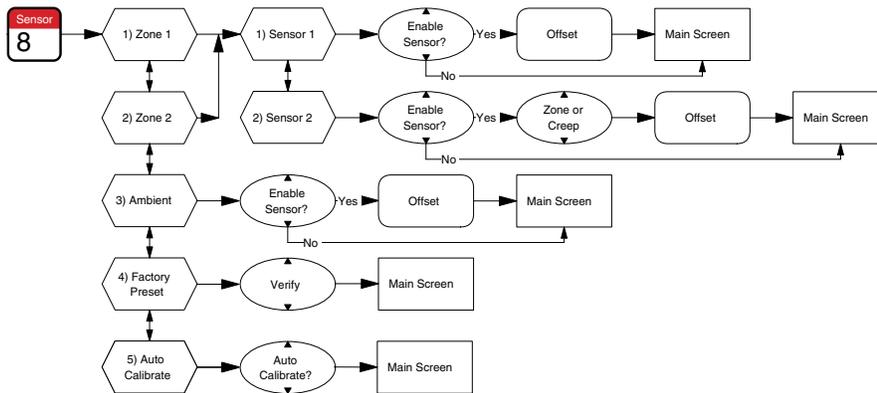

Flowchart 5

Each RAPID control has inputs for five sensors; one Ambient Sensor and two sensors for each zone.

Flowchart 5 shows the menu steps for configuring the sensors.

9.1 Sensor Descriptions

Sensor 1

Sensor 1 can only be used to measure the Zone (room) temperature.

Sensor 2

Sensor 2 may be used to average with Sensor 1 for the Zone temperature, or it may be set to measure temperature for the Creep area.

Ambient

The Ambient Sensor is used to measure the temperature of the outside air that is used to supply fresh air to the zone.

9.2 Calibrating Sensors

After a sensor is chosen (1, 2 or Ambient) it will ask if the sensor is to be enabled. Use the arrows to answer Yes or No.

If sensor 2 is enabled it will ask if it should be enabled as a Zone sensor or a Creep sensor. Use the arrows to choose which area it will be measuring.

Last is the sensor calibration itself. The control measures what the sensor is reading and shows it as its Nominal reading. If this temperature is not quite correct you can fine tune it with the Offset. Enter the offset so that the Nominal reading plus the offset gives the real room temperature.

NOTE:
If no sensors have been enabled in a zone, the temperature for the zone will give a reading of -100°C (-147°F)

NOTE:
When multiple controls are at a site, they can be networked together so that only one control needs to have an ambient sensor. With or without a computer attached, the Ambient Temperature will be broadcast across the network to the other controls. Only enable the ambient sensor on the control with the ambient sensor connected to it, all other controls should have the ambient disabled.

9.3 Factory Calibration

This menu option sets all the offsets back to zero.

9.4 Auto-Calibrate

With this enabled the control constantly monitors the sensor calibration and automatically adjusts it to keep the sensor reading accurately.

9.5 Sensor Failures


If there is only a single sensor in an area and that sensor goes bad the control will no longer be able to monitor the temperature in the room. When this occurs the control will go into Emergency Mode (see page 13).

If there are two sensors in an area and one sensor goes bad, the control will go into alarm but will automatically ignore the bad sensor and run the ventilation off the one good sensor. If both sensors go bad in the area the control is not able to monitor the temperature and will go into Emergency Mode (see page 13).

Once a sensor has gone bad you must fix the problem and then **reboot** the control for it to recognize the sensor again. The control **will not** recognize that the problem has been fixed until the control has been rebooted.

NOTE:
After a sensor has been repaired or replaced the control must be rebooted for it to quit calling the sensor bad.

10 Alarm Functions

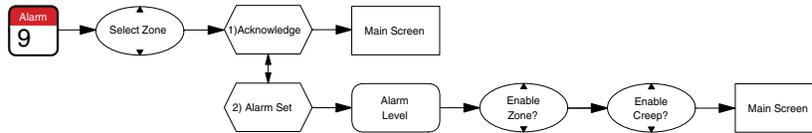

Flowchart 6

The RAPID control has a visual indicator on the front panel and two relay contacts, which are used to alert personnel of an alarm.

The control takes into consideration the Ambient Temperature when giving alarms. If the target for a room is 20°C and the alarm band is 5° an alarm would occur if the temperature in the room exceeded 25°. If the Ambient Temperature is 23° the alarm realizes that the room temp may not be able to be under 25° so it won't give an alarm until the room temperature reaches 28°. When the Ambient Temperature is above the target temp, the alarm band moves up with the Ambient Temperature.

Flowchart 6 shows the menu steps for stepping through the Alarm submenus.

Both areas will have the same level for the alarm, but each area can be enabled separately.

10.1 Alarm Acknowledge

Once an alarm has occurred, it must be acknowledged for the alarm condition to be cleared, with the exception of a power loss alarm. Acknowledging will clear the alarm and de-activate it for 15 minutes, allowing time to correct the problem that caused the alarm. If the problem has not been corrected 15 minutes after acknowledgment, the alarm will be re-activated.

10.4 Emergency Mode

When the control is no longer able to read the temperature of the room the control will go into Emergency Mode Operation. Depending on the mode the control was in before the failure the control will respond in the ways listed below.

10.2 Alarm Level

The Alarm Level is the number of degrees above or below target at which an alarm will occur. An alarm condition will light the Alarm indicator on the RAPID panel and close the alarm contacts to activate an auto-dialer alarm system, as well it sends an alarm condition to the RAPID-PC software if it is installed.

Mechanical Ventilation Mode

If the failure occurs when the control was running only the exhaust fans and/or heater, the control will run only the Stage 1 fan (and Stage 0 if installed) at 100%.

Natural Ventilation Mode

If the failure occurs when the control has the natural ventilation curtain(s) open, the control will leave the curtains and fans running exactly as they were before the failure occurred.

If the curtains are open only at their minimum opening, the control will open them a single run time to allow adequate airflow through the room.

Tunnel Mode.


If the control was operating the tunnel fans when the failure occurred, the control will leave the tunnel fans running and turn on all exhaust fans.

10.3 Enable and Disable

The Zone and Creep areas have separate enables for the Alarm.

Once the control has entered emergency mode it must be rebooted to return to normal operation.

11 System Menu

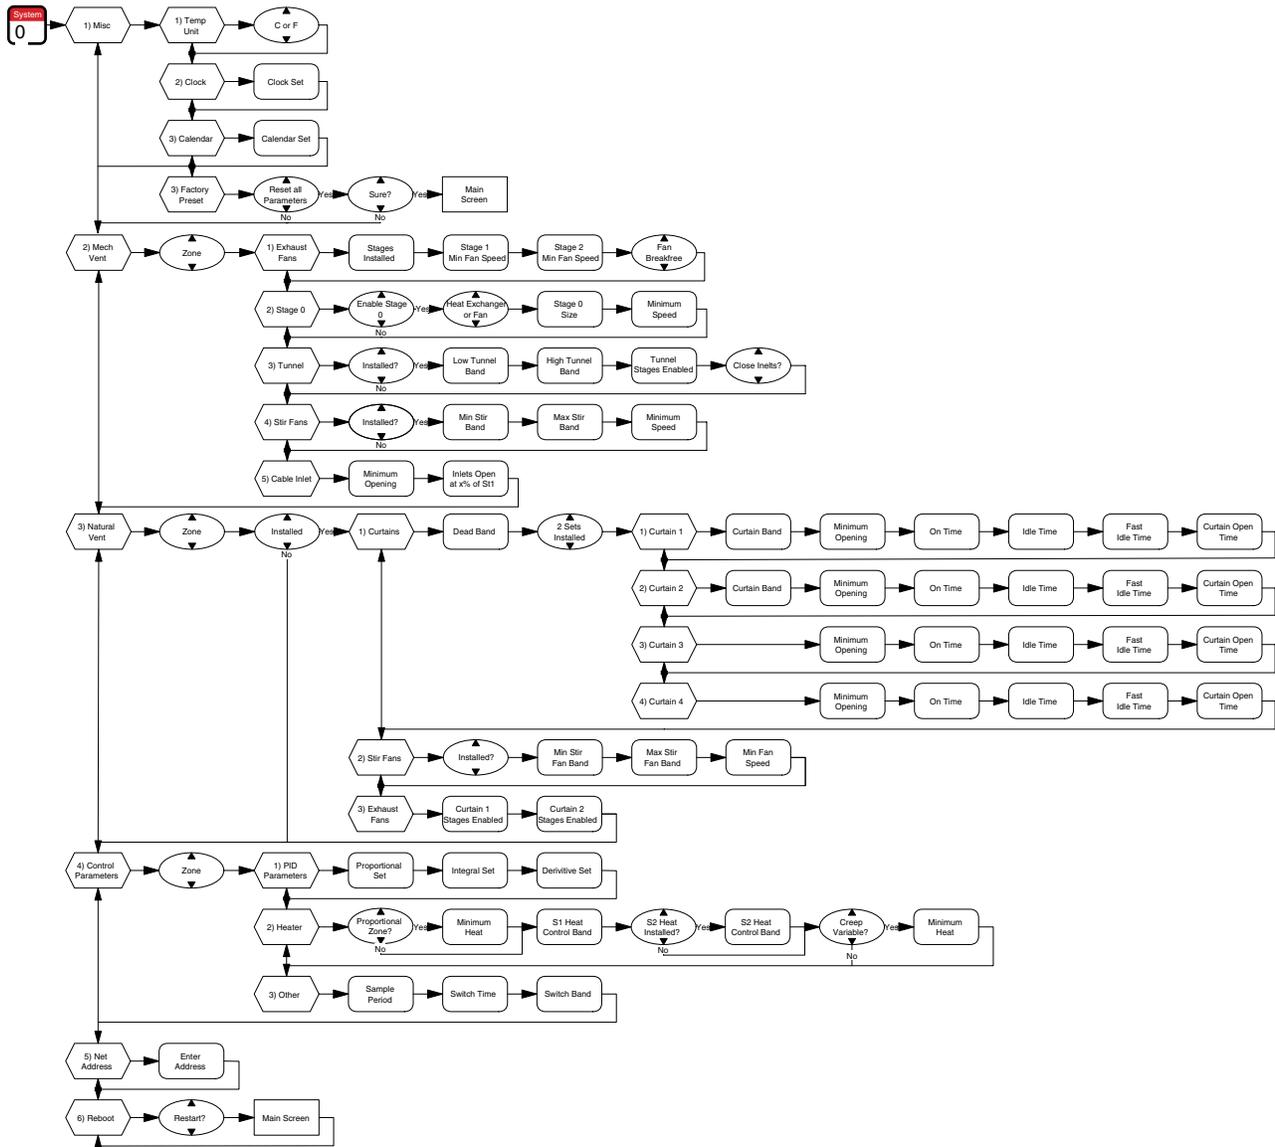

Flowchart 7

All system parameters, which are typically a one-time setup, are contained in this menu.

Flowchart 7 shows the menu steps navigating through the System submenus.

11.1 Miscellaneous Parameters

This holds parameters that affect the display and Factory Preset.

A) Temp Unit

The temperature unit may be selected as either °F or °C. Use arrow keys to select, press OK.

B) Clock

The system uses a 24-hour clock. To enter time, enter hh, press OK ...enter mm, press OK.

C) Calendar

The calendar is displayed as dd-mm-yy. To enter calendar, enter dd, press OK, then enter mm, press OK and enter yy then press OK.

D) Factory Preset

This resets ALL configurable parameters back to the factory settings. When this is chosen, the control will be configured the way it was when it was programmed at

the factory. All parameters are reset. None of the changes made at the site will be kept.

IMPORTANT:

Use of the Factory Preset should only be executed under the direction of DEL-AIR.

11.2 Mechanical Ventilation

This section deals with the setting up of all components to do with forced air ventilation in the facility.

A) Exhaust Fans

Stages Installed

This is the number of stages of exhaust fans that are actually installed in the zone and can be used for maximum ventilation. The total number of stages installed should be entered here. This does not include fans such as stir fans or tunnel fans. Temporarily unused stages should be enabled/disabled from the VENT menu.

Note:

If a fan is simply unplugged or in need of repair it should still be shown as installed here but disabled from the VENT menu.

Minimum Fan Speeds

The minimum speed for the stage 1 and 2 fans must be entered if they are installed. This is a fan protection feature, as not all models of fans respond the same to variable speed controls. Under no circumstances, other than test, will the controller let the fans run slower than these parameters.

This is entered as a percentage of full speed. The default speed is 35%. It is recommended that this be adjusted once installation is complete, so the fan to be speed controlled can be supervised. The test feature of the control can be used to find a suitable Minimum Fan Speed.

Important

Minimum fan speed is not the same as minimum ventilation rate. Min vent is the speed of the stage 1 fan if the heater is running. When stage 2 starts to run stage 1 will initially drop to the min fan speed.

Fan Breakfree

When a fan is not moving and is then told to run slowly it may stay stalled if it is blocked by ice or other debris. This option helps the fan to start by giving the fan a 100% voltage burst for five seconds, it then returns the fan to the speed at which the controller is requesting. "YES" enables the burst and "NO" disables the burst.

B) Stage 0

Stage 0 is set up to operate heat exchangers or fans that provide min vent when stage 1 is too large for the min vent required.

Enable Stage 0

This tells the control to operate stage 0.

Stage 0 is Heat Exchanger or Fan

When Stage 0 is enabled as a heat exchanger it will automatically shut off when stage 2 runs at 100% since the heat exchanger at this point provides such a small

percentage of total air movement. When enabled as a fan, stage 0 will continue to run even when stage 2 reaches 100%.

Stage 0 size

Since stage 0 works with stage 1 to provide minimum ventilation in the room the control needs to know how big stage 0 is in relation to stage 1 so that it knows when to use each fan to provide min vent.

This is entered at a % of stage 1 fan. If stage 1 is one 4K fan and stage 0 is one 2K fan then it would be entered at 50% of stage 1.

Minimum Speed

This setting is similar to the Min Fan Speed found in the Exhaust Fans menu of section 11.2 A.

C) Tunnel

Tunnel Ventilation is a ventilation strategy in which a large amount of fan power is located at one end of a room and a curtain is located at the opposite end. When tunnel is engaged the curtain drops and the tunnel fans come on. Air is pulled through the room as in a tunnel.

The RAPID provides two stages of tunnel, each with its own temperature band at which it cuts in. The Low Tunnel Fans cut in and the Tunnel Curtain opens at the Low Tunnel Band and will run until the temperature drops to half of that band. The High Tunnel Fans cut in at the High Tunnel Band and cut out when the temperature drops back to the Low Tunnel Band.

Stir Fans do not run in tunnel mode.

Low Tunnel Band

This is the temperature at which the first tunnel fans come on and the tunnel curtain drops. It is entered as a band from Target.

High Tunnel Band

This is the temperature at which the remaining tunnel fans come on. If only one stage of tunnel fans is used, this band should be set equal to the Low Engage Band.

Exhaust Stages Enabled

Here you choose the stages of exhaust fans that you want to run while the tunnel fans are running.

To choose which fans you want to run press the number button of the stage on the keypad. To remove a stage, press the number button of that stage again and it will disappear. The chosen stages will appear on the display. You can choose any combination of stages, they do not have to be successive.

Close Inlets?

This is the option of keeping cable controlled inlets open or closing them when tunnel mode is entered.

Use the arrow keys to choose Yes to close the inlets or No to keep them open.

D) Stir Fans

Stir fans are not meant to exhaust air but are instead used to circulate air in a room. Stir fans are able to ramp with temperature either increasing as temperature rises or decreasing as temperature rises.

To make the fan speed increase as temperature rises set the Min Stir Fan Band lower than the Max Stir Fan Band. If you want the fans to decrease as temperature

rises set the Min Stir Fan Band higher than the Max Stir Fan band.
Remember that this is a band from the Target Temperature, not a fixed temperature.
There is a 0.5°C hysteresis built in to the Min Stir Fan Band. This means that the stir fans will not shut off immediately if the temp decreases (or increases depending on the settings) by 0.1°. It will wait until the temp has moved 0.5°C before it shuts off again.

Stir Fan Installed

This tells the control if it is supposed to be operating a stir fan while in mechanical vent mode, to circulate the air inside the Zone. Stir fans that operate in natural ventilation are set up in the natural ventilation menu.

Min Stir Fan Band

This is the temperature the Stir Fans will start operating and run at the minimum speed, while the control is in mechanical ventilation mode.
This is a band from Target. It can be positive or negative.

Max Stir Fan Band

This is the temperature at which the stir fans will reach 100% on. This too is a band from Target and can be set either positive or negative.

Min Fan Speed

This is the minimum speed the stir fans will run when they turn on.

Cable Inlet

When the inlets are calibrated at the module, the open and closed limits are set. In this menu are settings for what percent of open the inlets should be when in mechanical ventilation mode and at when the inlets should start opening.

A) Inlet Minimum Opening

Since some inlets do not have a min vent slot or may have the slot blocked, it may be necessary to open the inlets some whenever the control is in mechanical ventilation mode.

Enter the percent of total opening that you want the inlets to stay open when the control is running at minimum ventilation.

When the control is put into empty room program with no fans enabled or goes into natural or tunnel ventilation the inlets will then totally close but when returning to mech vent it will keep the inlets open to this amount.

B) Start To Open Inlets At

To keep proper static pressure in a room you may need to start opening the inlets as soon as the fans are engaged or it may be necessary to wait until the ventilation calls for a certain percentage of stage 1.

This setting is the percent of Stage 1 (combined with stage 0 if enabled) where you want the inlets to start to open past the Inlet Minimum Opening.

11.3 Natural Ventilation

The RAPID can be used to control Natural Ventilation. It can control from one to four curtains independently as well as a Stir Fan. You can also configure any or all exhaust fans to run when curtain 1 or curtain 2 is open. Natural Ventilation mode is entered when the mechanical

ventilation has reached its maximum and the temperature has exceeded the Curtain Band of at least one curtain. Once in Natural Ventilation the control will try to keep the room temperature at the C1 band. When the temperature has dropped below Target and the curtains have closed the control will go back into Mechanical Mode.

This menu contains the parameters used to set up the control to use Natural Ventilation.

NOTE:	
For all Natural Ventilation examples assume:	
Target	20°C
C1 band	4°C
C2 band	6°C
Dead Band	1°C

Natural Ventilation Installed

When enabled the control will show the natural ventilation parameters and use the natural ventilation modules if any are connected.

A) Curtains

Dead Band

To avoid constant movement in the curtains as the room temperature hovers around curtain 1 band, you can specify a region around the curtain 1 band during which the curtains will hold their position. If this is set for 1 degree the curtains will not move at all while the room temperature stays within 1 degree of the curtain 1 band. As soon as the temperature goes more than 1 degree away the control again moves the curtains using the idle and run times.

2 Curtain Sets Installed

This is where you inform the control how many curtains are being controlled in the zone. When set to YES, the control will operate two sets (four) of curtains. When NO it operates one set (two) of curtains in the zone.

When two curtain sets are being used you must enable both sensors in that zone to be zone sensors since Curtains 1 and 2 are controlled by Sensor 1 and Curtains 3 and 4 are controlled by Sensor 2. With this configuration, even though C1 and C3 open at the same temperature they are still controlled independently since they are controlled by different sensors.

The only time the control will operate both sets of curtains by the same sensor is if one sensor goes bad. The control will then ignore the bad sensor and run both sets from the good sensor.
--

If one or three curtains are being used, the control still asks for data on the second or fourth curtain even though it is not being used. The second (or fourth) curtain should have the same settings as the first curtain.

NOTE: If two curtain sets are being used, Sensor 2 must be enabled as a zone sensor.
--

Curtain Band

This is the number of degrees above target that the curtain will start to operate.
e.g. When the Zone temperature exceeds 24 degrees Curtain 1 will open to its minimum opening. When the

temperature exceeds 26 Curtain 2 goes to its minimum opening.

This parameter is asked only for Curtains 1 and 2. Curtain 3 uses the same band as Curtain 1, Curtain 4 uses the same band as Curtain 2.

When using natural ventilation the curtains will open and close to try to keep the temperature to the Curtain 1 band. The control will not totally close curtain 1 until the temperature has dropped back under the room target temperature.

Minimum Curtain Opening Time

The minimum opening is used like the min vent for the mechanical ventilation. While in Natural Ventilation mode the curtains will stay open at least this amount to make sure adequate ventilation is provided.

When the exhaust fans are running at 100% and the temperature reaches a curtain's band, the curtain opens to its minimum opening time. The curtain will then never close more than its min opening until the curtain actually closes and the mechanical ventilation engages to provide ventilation.

The min opening entered should be long enough to ensure adequate ventilation when the curtain is opened this amount.

On Time

When the RAPID opens or closes the curtains, they will only move for a short period of time and then wait to see if the temperature has changed.

On Time is the amount of time the curtain will be opened or closed, at a time, when told to move by the RAPID.

Idle time

After the curtain has moved the control will wait to see if the temperature has changed. The Idle Time is the amount of time the curtain will wait before it starts to move the curtain again.

Fast Idle Time

When the control is actively using Natural Ventilation, the control tries to control the room to the Curtain 1 Band. When the room temperature is below the band it closes the curtains using Run Time and Idle Time. When the room temperature drops below the Target Temperature the control closes the curtains using Run Time and Fast Idle Time. Fast Idle Time can be set as low as 10 seconds so the curtains close very quickly when the room temperature gets cool.

This feature is good for when a hot day suddenly turns cold such as when a storm blows in. Instead of waiting the regular idle time each time it uses the fast idle time which closes the curtains much faster and results in the room cooling too much.

Curtain Open Time

This is the time it takes for the curtain to continuously move from totally closed to totally open, or visa-versa.

When the control is powered up initially or reset, the curtain will calibrate itself by opening or closing totally depending on the ambient temperature. Since the control does not have direct feedback on the position of the curtain, it uses the OPEN TIME to calculate the position of the curtain. It is therefore important to enter an accurate time for this parameter.

To find what time to enter here, use a stopwatch to see how long it takes to manually go from closed to open or from open to closed, and enter in that time.

- The parameters from Curtain Minimum Opening to Curtain Open Time will be asked for each curtain that the RAPID is controlling, either two or four. Each time the parameter is asked for it will be labeled C1...C4

B) Stir Fans

Stir Fan Installed

This tells the control if it is supposed to be operating a stir fan while in natural ventilation mode, to circulate the air inside the Zone.

These are the same physical fans as the Mech Vent Stir Fans but can be set to run at different temperatures from Mech Vent mode to Nat Vent mode.

Min Stir Fan Band

This is the temperature the Stir Fans will start operating and run at the minimum speed, while the control is in natural ventilation mode.

This is a band from Target. It can be positive or negative.

Max Stir Fan Band

This is the temperature at which the stir fans will reach 100% on. This too is a band from Target and can be set either positive or negative.

Min Fan Speed

This is the minimum speed the stir fans will run when they turn on.

C) Exhaust Fans

The RAPID Control can be configured to run any combination of exhaust fans when the control is in natural ventilation mode. The fans chosen to run will run at 100% and not vary

Curtain 1 Stages Enabled

When only curtain 1 (curtain 1 and curtain 3 if two sets are enabled) is open the exhaust fans chosen here will run.

To select which fans you want to run press the stage number on the keypad, to deselect press the number again and the stage will disappear. The chosen stages will appear on the display. You can choose any combination of stages, they do not have to be successive.

Curtain 2 Stages Enabled

When all curtains are open the fans chosen in this area will run. They will continue to run until curtain 2 closes or the control goes into tunnel mode.

11.4 Control Parameters

This menu holds the parameters that are used only for fine tuning the control to suit the zone it is controlling. Under normal circumstances these should never require any changes.

A) PID Parameters

This is the most unique and revolutionary feature in agricultural ventilation control.

The PID parameters can be set to control the temperature proportionally or using PID. When using proportional, the room temperature will average higher than the target temperature since ventilation will increase only as the

temperature increases. When using PID, the room temperature will usually average at the target temperature but will fluctuate above and below it. These parameters can be adjusted to increase or decrease the response time of the ventilation system. The PID strategy also allows automatic control of all three stages of ventilation to one target temperature. Table 3 shows the recommended settings for PID settings.

These parameters are set to default values and usually do not need to be changed, before any changes are made to these DEL-AIR should be contacted.
 If you want to disable PID and use the control to increase/decrease fan speed proportionally, like most controls, set the Integral parameter to zero.

Table 3

Parameter	Proportional Only	Using PID
PROPORTIONAL	0.2000	0.1400
INTEGRAL	0	400
DERIVATIVE	0	0
CONTROL BAND	0.2°C (0.4°F)	0.2°C (0.4°F)
SWITCH BAND	0.7°C (1.4°F)	0.7°C (1.4°F)
SAMPLE PERIOD	30	30
SWITCH TIME	10	10

- The above parameters are a guideline only. If further tuning of the system is required, please consult your dealer. See Also, Section 13 Control Strategy.

B) Heaters

Proportional Zone

The stage 1 zone heater is able to work proportionally or on/off. To run a variable heater set this parameter to Yes.

Minimum Heat

This is the lowest the heater will run when told to run. It will vary proportionally with the temperature from this percentage to 100%.

Stage 1 Control Band

This sets the temperature that the heater turns on if the proportional zone parameter is set to No. If the proportion zone parameter is set to Yes, this is the number of degrees below Target that the heat will turn on at 100% The number entered is the number of degrees below target that the heater cuts in. The heater will then shut off when the room temperature rises to the target temperature

NOTE:
 Under special circumstances, the PID control algorithm may override this setting.

e.g. If the target is 20.0 degrees and the Control Band is 1.0 degrees, the heater will cut in at 19 degrees and run until the temperature is 20 degrees.

- see Table 3

2nd Stage Heater Installed

The RAPID can run two different stages of heaters. Some heaters are made to run at two different ranges or you can install one heater (or one set of heaters) to turn on at Stage 1 Band and then another heater (or set of heaters) can turn on to supplement the first heater at the Stage 2 band.

Stage 2 Control Band

This sets the temperature that the heater turns on to high heat if the heater is capable of two stages. The number

entered is the number of degrees below target that the heater cuts in. The heater will then shut off when the room temperature rises to the target temperature

Creep Heat Proportional?

Is the heater for the Creep Area able to perform proportionally or just on/off?

Minimum Intensity

If the creep heater is proportional, how much power should the lights have when the temperature is at the Creep target temperature?

C) Other

Sample Period

This is the number of seconds the controller waits between temperature readings. This should be set to 30

Switch Time

This is the number of seconds the temperature has been above the Switch Band before the control switches to cooling mode.
 This should be set to 10

Switch Band

This setting defines when the control starts to use the fans to cool a room.

This is the number of degrees above target that the fans will engage to start cooling the room. The fans will then continue to operate in PID mode as long as the temperature does not fall below the target minus Control Band long enough for the fans to slow down to min vent.

- see Table 3

11.5 Network Address

This feature is a requirement for the RAPID-PC software package. Each controller requires a unique address so that the computer can recognize each one. Network addresses are from 01 - 65.


The network addresses will be supplied by DEL-AIR Systems Ltd. when the RAPIDPC software is delivered.

11.6 Reboot

When some parameters are changed, the control will request to be rebooted so that it can re-calibrate itself. If

the display reads "Reboot Please", select this menu option and answer yes to the Restart Control question, the control will then operate with the new parameters inputted.

12 Setting up Security

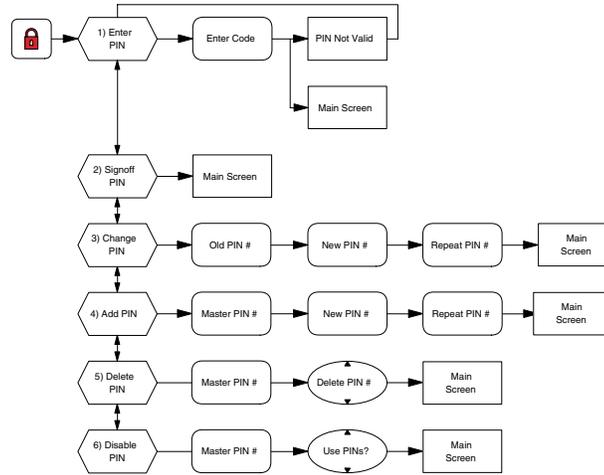

Flowchart 8

To prevent unauthorized access to the control, the RAPID can be set up to use **Personal Identification Numbers (PINs)** to identify users and limit access to the control.

The control is shipped from the factory with the PIN feature disabled. With PIN disabled anyone can have access to, and can modify any of the RAPID's parameters. Once the PIN feature is set up, only those with a PIN can have access to the control. An added feature of using PIN is the ability to log who made changes to parameters and when they were made.

With PIN enabled, if someone wanted to change the target temperature and did not enter their PIN, the control would show "**Insufficient PIN Access**" on the screen. To gain access to the control they would have to press the PIN key and enter their PIN. When they have entered a valid PIN it would show PIN # Active. With their PIN active, it will then let them change any of the parameters their level of PIN will allow.

There are eight PINs that can be assigned. Of these eight PINs there are 3 different levels of access.

Access Level ONE is the only PIN that can not be deleted; it is the MASTER level. This PIN will give access to every feature of the control and would be used by the overall barn manager.

Access Level TWO is for the assistant manager. The access of TWO is the same as ONE except that TWO can not assign, change or look at PIN logs.

The remaining six PINs have Level Three security access. These people will have access to most of the control except for the Timer Menu, Sensor Menu and System Menu.

The PIN is made up of five digits; the first digit is the access level, the remaining four numbers is a password that ensures only that person can use that number. Initially the master will set up all the PINs that the users will use, he will have to assign a password to the user. Later, the user may change the password.

12.1 Using The RAPID With PIN Enabled

First press the PIN key and press OK. Next enter your PIN digits and press OK. When you enter your PIN, the screen will show the first number of your pin, which is the access level. The rest of the numbers will show up as an asterisk (*) so that others can not see your password as you enter it.

If the PIN you entered is valid, it will send you back to the main screen where it will show your access. If the PIN was invalid it will say, "**PIN not valid**". Press OK twice and re-enter the PIN.

With your PIN access you may enter whatever menus your access will allow. When done you can press the PIN key and press the down arrow key so that it says **2)**

Signoff PIN and press OK. This will log off your PIN so that nobody else can make changes with your identification. The active PIN will automatically sign off if no buttons are pressed on the control for three minutes.

12.2 Setting up PIN

When the control is first shipped the master PIN is always set to 11234. Since this is the default number we put in it should get changed immediately after PIN is enabled on the control.

The first step in setting up PIN is to enable it on the control. To do this, go to **6) Disable PIN**. When it asks **Use PINs?** change the NO to YES and press OK.

The second step is to allow other PINs or users to have access. To do this, go to **4) Add PIN**. It will ask for the new PIN number. Remember that PIN 1 will always start with 1, PIN 2 starts with 2 and so on. You will have to assign a PIN to the user and inform him of his number. He can always change his PIN later.

PINs (other than user 1) can be added or deleted at any time but only by PIN 1.

12.3 Changing PINs

Any user can change their own PIN at any time. The limitations on PINs are that they always have to start with the same number (access number) and that the password portion of the number (last four digits) can't be used by someone else. The password can not be set to 0000.

13 Control Strategy

13.1 – PID Explanation

The RAPID control uses up to four stages of exhaust fans; stage 0, 1 and 2 are variable, stage 3 is on/off. The stages have been configured in the PID system such that each stage accounts for a certain percentage of the total ventilation. The system works most effectively if the installation is as follows:

STAGE 0 + 1	= 17% (Variable Speed)
STAGE 2	= 33% (Variable Speed)
STAGE 3	= 50% (On/Off)
Total	=100%

The PID system allows the RAPID to control ventilation in a much different manner than the majority of proportional environment controls. The following example is used to explain how the RAPID system controls the ventilation.

EXAMPLE (Assume minimum fan speeds for stage 1 and 2 are 25%.)

STAGE 1:	2000 CFM (minimum 500 CFM)
STAGE 2:	4000 CFM (minimum 1000 CFM)
STAGE 3:	6000 CFM
TOTAL:	12000 CFM
Required minimum ventilation for the room: 500 CFM	

The RAPID makes calculations for ventilation based on its deviation from the target temperature. Unlike a proportional control, this control does not use separate target temperatures for each stage. Therefore, it will not necessarily turn on the fans in order of stage 1, 2, and 3.

For example, as the required ventilation increases from 500 CFM to 2000 CFM, the stage 1 fan will increase from 25% to 100%. If the required ventilation increases to a rate above 2000 CFM, i.e. 2400 CFM, the Stage 1 fan slows to its Minimum Fan Speed, and the Stage 2 fan comes on at about 60%.

Because the Minimum Fan Speed of the Stage 2 fan is 25%, it will be able to vary from 1000 CFM to 4000 CFM. Therefore, if the required ventilation drops from 2400 CFM back to 1500 CFM, the control will continue to vary only the Stage 2 fan while keeping the Stage 1 fan

12.4 Deleting PINs

PIN 1 is the only user allowed to delete PINs. This can be done when another user forgets his PIN or when a user is no longer allowed access to the control.

12.5 PIN Logs

This is the list of changes that have been made to the RAPID. For each log, a number is given that must be compared against a master list to give the information. RAPID-PC software is available that makes the PIN logs easier to read.

at it's Minimum Fan Speed. This greatly improves linear ventilation control, and also reduces power consumption compared to proportional controls.

If the minimum ventilation for the room is less than Stage 1 is able to drop to, another stage can be used. This stage is called Stage 0. Stage 0 works in conjunction with Stage 1 for ventilating the room. In the example Stage 1 is able to drop to 500CFM but if only 200CFM is required, Stage 0 would handle it. Stage 0 may be a heat exchanger such as an RA350. So when less ventilation is required than Stage 1 provides it shuts off and the heat exchanger on Stage 0 takes over to provide the minimum ventilation. As ventilation needs increase, the heat exchanger is shut off when Stage 2 comes on. If Stage 0 is set to be a fan, it will keep it running to help ventilate the room.

13.2 Typical Control Operation

This describes the operation of the devices connected to the control as the ventilation needs in the room go from minimum to maximum.

1. Heater running, minimum ventilation running, inlets at their minimum setting.
2. Heater off, minimum ventilation running, inlets at their minimum setting
3. Ventilation increases to maximum, stepping though the staging as described in section 13.1, Inlets open as the fans provide more ventilation.
4. If Natural Ventilation is enabled. When exhaust fan ventilation is running at 100% and if the temperature is above the curtain 1 band, Curtain 1 opens to its minimum opening. The exhaust fans enabled for Curtain 1 run at 100% and the inlets close.
5. Curtain 1 starts to open if the temperature on Sensor 1 rises past the dead band.
6. Curtain 2 starts to open if the temperature on Sensor 1 rises pas the Curtain 2 band. The exhaust fans enabled for Curtain 2 run at 100%
7. If Tunnel is enabled. When the curtains are fully open and the temperature is above the low tunnel band the low tunnel fans run at 100%, the exhaust fans enabled for tunnel run at 100% and the inlets move to the position set in the system menu.
8. When the temperature rises above the high tunnel band all the tunnel fans run at 100% with the enabled exhaust fans

Appendix A – Module Addressing

The codes that the Multi Device Module, 4 Amp Module, 15 Amp Module and Output Module can be set to are shown in Table 4.

Table 4

Controlled Device	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5
Stage 1 Zone Heater	OFF	OFF	OFF	OFF	OFF
Stage 2 Zone Heater	ON	ON	ON	ON	ON
Creep Heater	OFF	OFF	ON	OFF	OFF
Stage 0	OFF	ON	ON	ON	ON
Stage 1 Fan	ON	OFF	OFF	OFF	OFF
Stage 2 Fan	OFF	ON	OFF	OFF	OFF
Stage 3 Fan	ON	ON	OFF	OFF	OFF
Timer 1	ON	OFF	ON	OFF	OFF
Timer 2	OFF	ON	ON	OFF	OFF
Timer 3	ON	ON	ON	OFF	OFF
Spray/Drip Cool	OFF	ON	OFF	OFF	ON
Stage 1 Tunnel Fan	ON	OFF	OFF	OFF	ON
Stage 2 Tunnel Fan	ON	ON	OFF	OFF	ON
Stir Fan	OFF	OFF	OFF	OFF	ON

The codes that the Cable and Curtain Modules can be set to are shown in Table 5.

Table 5

Cable Control	OFF	OFF	OFF	OFF	OFF
Curtain 1	OFF	OFF	OFF	ON	OFF
Curtain 2	OFF	OFF	ON	ON	OFF
Curtain 3	OFF	OFF	OFF	OFF	ON
Curtain 4	OFF	OFF	ON	OFF	ON

Table 6 shows how to address the zone switch.

Table 6

Zone	Switch 6
Zone 1	OFF
Zone 2	ON

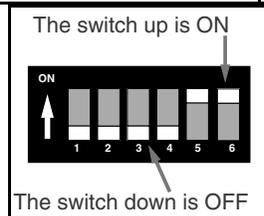


Figure 4

Addresses can be changed at any time, powered or not.

